



## Camera Bottom

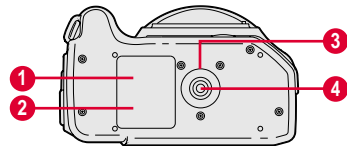


1. Product label
2. Serial number
3. Tripod mount rubber pad
4. Tripod mount

## Camera Sides

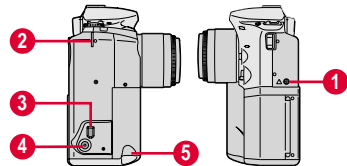


1. Flash Sync Terminal (DCS 330 only)
2. Hand/Neck Strap eyelet
3. IEEE 1394 Host Interface Connection
4. AC Adapter Connection
5. Hand Strap eyelet


## Camera Status LCD Panel

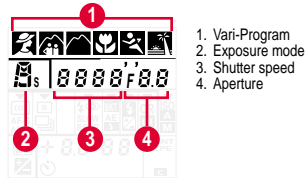

1. Vari-Program
2. Exposure mode
3. Shutter speed
4. Aperture

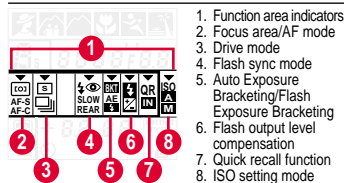

1. Function area indicators
2. Focus area/AF mode
3. Drive mode
4. Flash sync mode
5. Auto Exposure Bracketing/Flash Exposure Bracketing
6. Flash output level compensation
7. Quick recall function
8. ISO setting mode

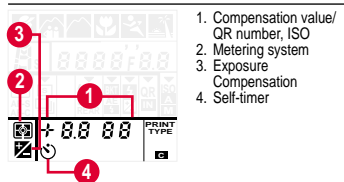

1. Compensation value/QR number, ISO
2. Metering system
3. Exposure Compensation
4. Self-timer

## Using the Digital Controls

**Display the Menu bar and select a Menu bar icon:** Press and hold the MENU button and rotate the Main Command dial until the desired icon is highlighted.

**Display a dropdown menu:** Highlight the Folder, Menu, Display, or White Balance icon (see next page), and continue pressing the MENU button until the dropdown menu appears.

**Choose an item from a dropdown menu:** Continue pressing the MENU button and rotate the Main Command dial until the desired menu choice is highlighted.

**Choose an item from a menu screen (e.g., Main menu):** Press and hold the SELECT button and rotate the Main Command dial to highlight your choice.

**Tag an image:** Quickly press and release the REC/TAG button.

**Record a sound file:** Press and hold the REC/TAG button and speak into the microphone.

## The Menu Bar

**Folder Icon**  
Displays the Folder menu



**Menu Icon**  
Displays choices for the Main and Properties menus



**Display Icon**  
Displays choices for Single, Four, and Nine Image Review mode



**Status Icon**  
Displays the Status screen that contains information about the current image



**White Balance Icon**  
Displays choices for White Balance settings



**Contrast Icon**  
Displays the Contrast screen where you can adjust the contrast of the images displayed on the Image LCD panel (the images themselves are not affected)



# Kodak Professional

## DCS 300 Series Digital Cameras




## Batteries

To power your camera, open the Battery/PC Card door, insert the battery tray into the battery tray slot until the tray is locked in place.

You can also power your camera with an AC adapter when working indoors or connected to a computer.


Check the battery icon on the Image LCD panel.

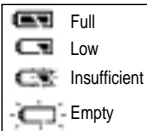

## PC Card

As you capture images, they are stored on Type II or Type III PC Cards (PCMCIA cards) in your camera.


There are two slots for PC Cards. You can insert two Type II cards or one Type III card.

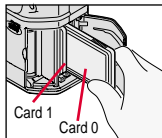

To insert a PC Card, open the Battery/PC Card door and insert. With two cards, the first card inserted is the active card.




To select a different PC Card, select the Folder icon, then select the card. (Refer to other side.)

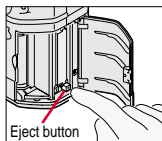

**Important!** Be sure the Card Busy LED is off before removing a PC Card. The blinking indicates data is being transferred to or from the PC Card. You can lose data if you remove a PC Card when it is busy.


To remove the PC Card, press the Eject button.

## Camera Front

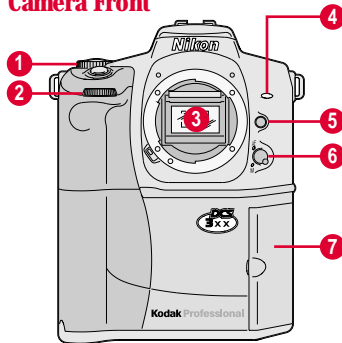


1. Main-Command dial
2. Sub-Command dial
3. Anti-aliasing filter (DCS 330 only)
4. Self-timer LED
5. Lens Release button
6. Focus Mode selector
7. Battery/PC Card door

## Camera Back

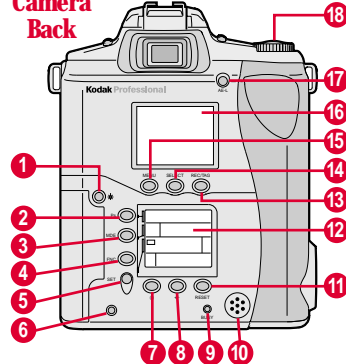

1. Camera Status LCD
2. Vari-Program (Ps) button
3. Exposure Mode (MDE) button
4. Function (FNC) button
5. Function Set (SET) button
6. Serial Port Jack (DCS 330 only)
7. Metering button
8. Exposure Compensation button
9. PC Card Busy/Record LED
10. Microphone
11. RESET button
12. Camera Status LCD Panel
13. REC/TAG button
14. SELECT button
15. MENU button
16. Image LCD panel
17. AE Lock button
18. Main-Command dial

## Camera Top

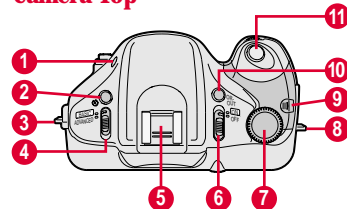

1. Flash Lock-release button
2. Self-timer button
3. Neck Strap eyelet
4. BASIC/ADVANCED switch
5. Accessory shoe
6. Power switch
7. Main-command dial
8. Neck/Hand Strap eyelet
9. Remote Shutter Release terminal
10. QR-OUT button
11. Shutter Release button



EASTMAN KODAK COMPANY  
Rochester, New York 14650  
© Eastman Kodak Company, 2000

Kodak and Kodak Professional are trademarks.  
Printed in U.S.A. P/N 6B4715 5/00